
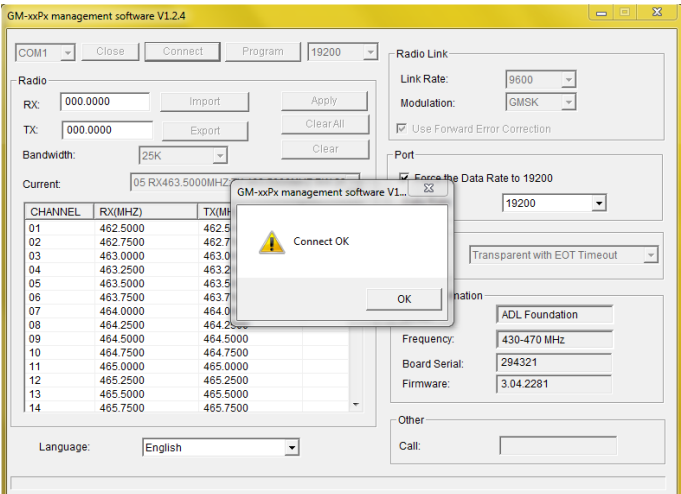


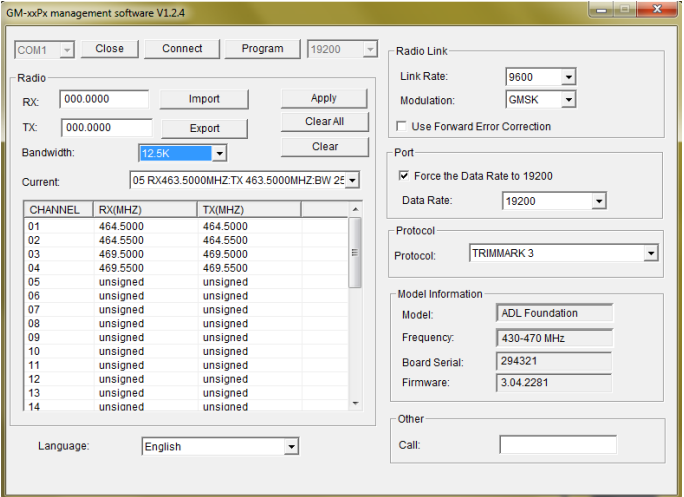
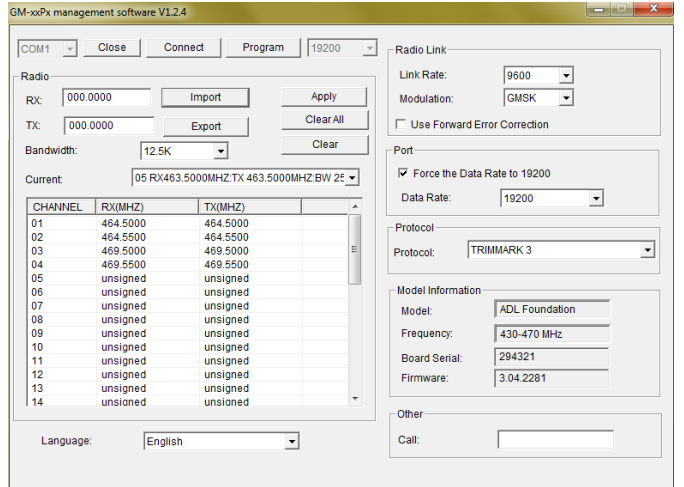
TKO Radio

Configuring Channel Tables

Step	Action	Display
1	<p>In order to configure the Radios in the TKO receiver you must have the TKO Radio Management Software.</p> <p>It can be downloaded here: http://championinstruments.com/champeblast/TKO Users CD/Radio Management Software/GM-xxPx management software V1.2.4.exe</p> <p>You can also download our default Channel Table here: http://championinstruments.com/champeblast/TKO Users CD/Channel Tables/12.5ChannelTable.ini.zip</p> <p>You will need to Unzip these files before running them</p> <p>*PLEASE NOTE: The FCC requires that you license your UHF radios. That is the user’s responsibility and not Champion Instruments or its representatives.</p>	
2	<ul style="list-style-type: none"> Connect your TKO receiver to the computer using the serial port on the “Y” cable that came with the system IMPORTANT: You cannot use the USB cable at this time. Make sure you have a Full Battery Power the receiver on Press F2 to Make Sure it is in “UHF Rover mode” (if not follow instruction on page 17 of users manual) 	
3	<ul style="list-style-type: none"> Run the GM-xxPx Radio Management Software by double clicking the install link Press the “OPEN” button then “CONNECT” You will see a Blue Bar across the Bottom then a message “CONNECT OK” Press “OK” 	

TKO Radio

Configuring Channel Tables

Step	Action	Display
4	<ul style="list-style-type: none"> Next Press “CLEAR ALL” Then press “IMPORT” Navigate to and Select the Channel Table you saved Change the Bandwidth to 12.5 Press “PROGRAM” You will see a Blue Status Bar On the TKO the Middle Red light will blink 	
5	<ul style="list-style-type: none"> When the Middle Red Light stops blinking Turn Off the TKO and Exit the GM-xxPx Management Software The Radio is now programmed, You may reconnect to check that the channels loaded properly 	
6	<p>Should you need any help please call us at: 770-234-3254</p>	